

LR-804J02/LR-804J03

Media DVR

Quick Guide



LR-804J02



LR-804J03




1. Main Unit




2. Power Cable



3. Power Adapter

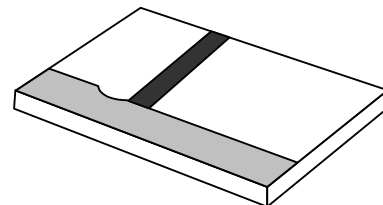

4. Quick Guide

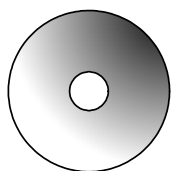

5. Software CD



6. Mouse



7 Remote Controller



8. Screws (X 4)



9. Audio Cable




10. BNC Adapter


| No. | Package Contents | Description |
|-----|----------------------|--|
| 1 | DVR Main Unit | Stand-alone Digital Video Recorder with Media Player |
| 2 | Power Cable | AC Power Supply to Adapter for DC 12V Power |
| 3 | Power Adapter | DC 12V Power Supply |
| 4 | Quick Guide (Manual) | Instructs users how to operate the Media DVR. |
| 5 | Software CD | Contains: (1) manuals (English/Chinese) (2) quick guide (English/Chinese) (3) software tools (4) README. |
| 6 | Mouse | Controls all functions of the Media DVR. |
| 7 | Remote Controller | IR Remote Controller for Media Player (for LR-804J02 only). |
| 8 | Screws (X4) | Fix an HDD to the HDD drawer. |
| 9 | Audio Cable | Connects left and speakers. (for LR-804J02 only). |
| 10 | BNC Adapter | BNC - to - RCA Video Adapter (for LR-804J02 only). |

2. Outlook

2-1. Front

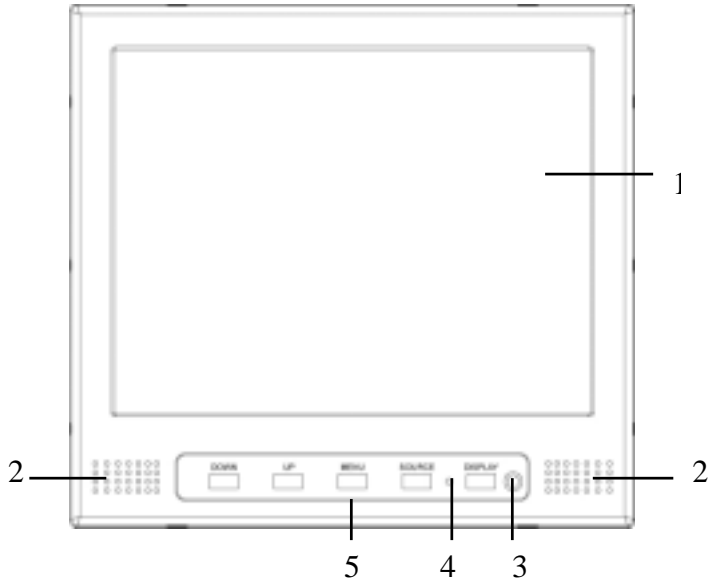


2-2. Side (for LR-804J02 only.)

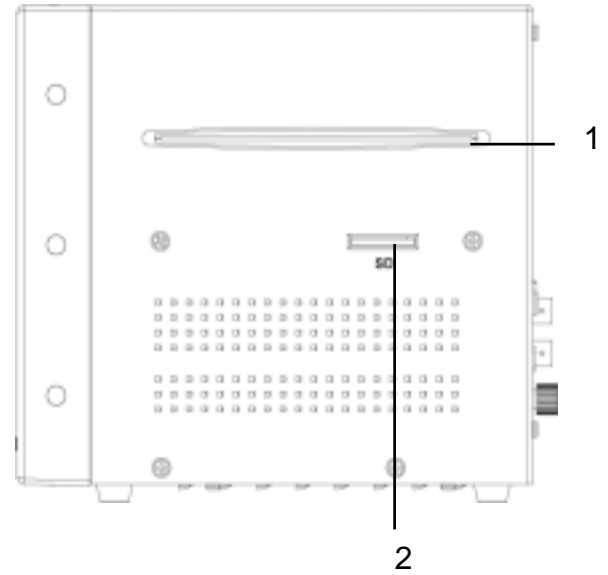

| Items | Function |
|---|---|
| 1. 8" LCD Display | Displays images. |
| 2. Speakers | Gives sounds. |
| 3. Receiver (IR Port) | Receives IR signals out of the remote controller. |
| 4. Power LED | Gives red light when the power is on. |
| 5. Control Buttons | Control the OSD menu of the LCD. |
| <input type="checkbox"/> <i>DISPLAY</i> | LCD Power Switch (On / Off) |
| <input type="checkbox"/> <i>SOURCE</i> | Video Source Switch (DVR / MEDIA) |
| <input type="checkbox"/> <i>MENU</i> | Open OSD menu for LCD adjustment. |
| <input type="checkbox"/> <i>UP</i> | Move up. / Increase values or volume. |
| <input type="checkbox"/> <i>DOWN</i> | Move down. / Decrease values or volume. |

| Item | Description |
|--------------|-----------------------|
| 1. DVD Drive | For Media Player Only |
| 2. SD Slot | For Media Player Only |


2-3. Rear

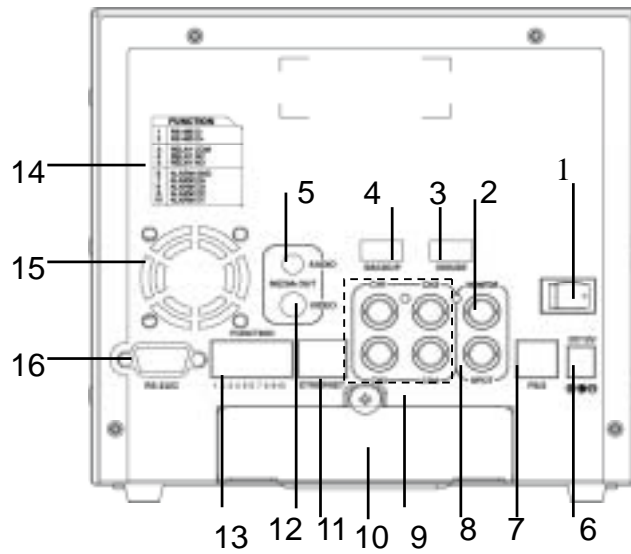

| No. | Items | Function | |
|-----|--------------------|--|--|
| 1 | Power Switch | Media DVR Power Switch (On/Off) | |
| 2 | MONITOR | Connects a monitor (NTSC / PAL). | |
| 3 | MOUSE | Connects a USB mouse. | |
| 4 | BACKUP | (1) For Backup of DVR Video Images (2) For DVR Firmware Upgrade | |
| 5 | MEDIA AUDIO OUT | Connects a monitor for the Media Player. (for LR-804J02 only.) | |
| 6 | DC 12 V | Connects a DC 12 V / 5A power supply. (for LR-804J02 only.) | |
| 7 | PS/2 | Connects a PS/2 mouse. | |
| 8 | SPOT | Connects a SPOT monitor. | |
| 9 | CH 1~4 | Connect cameras. | |
| 10 | HDD Drawer | For HDD Combination ((1) The jumper must be master. (2)The HDD is expandable to 500 GB.) | |
| 11 | ETHERNET | Connects the Ethernet. | |
| 12 | MEDIA VIDEO OUT | Connects a monitor for the Media Player. | |
| 13 | FUNCTION | Function Port for External Devices | |
| 14 | Function Port Note | 1~2 | For External Devices (eg. Speed Domes) |
| | | 3~5 | For Sirens (Relay Output) |
| | | 6~10 | For Inputs of 4 Alarms |
| 15 | Fan | Moderates the Media DVR's temperature. | |
| 16 | RS-232C | Allows engineers to debug the DVR's firmware. | |

3. Installation


3-1. Installation Configuration

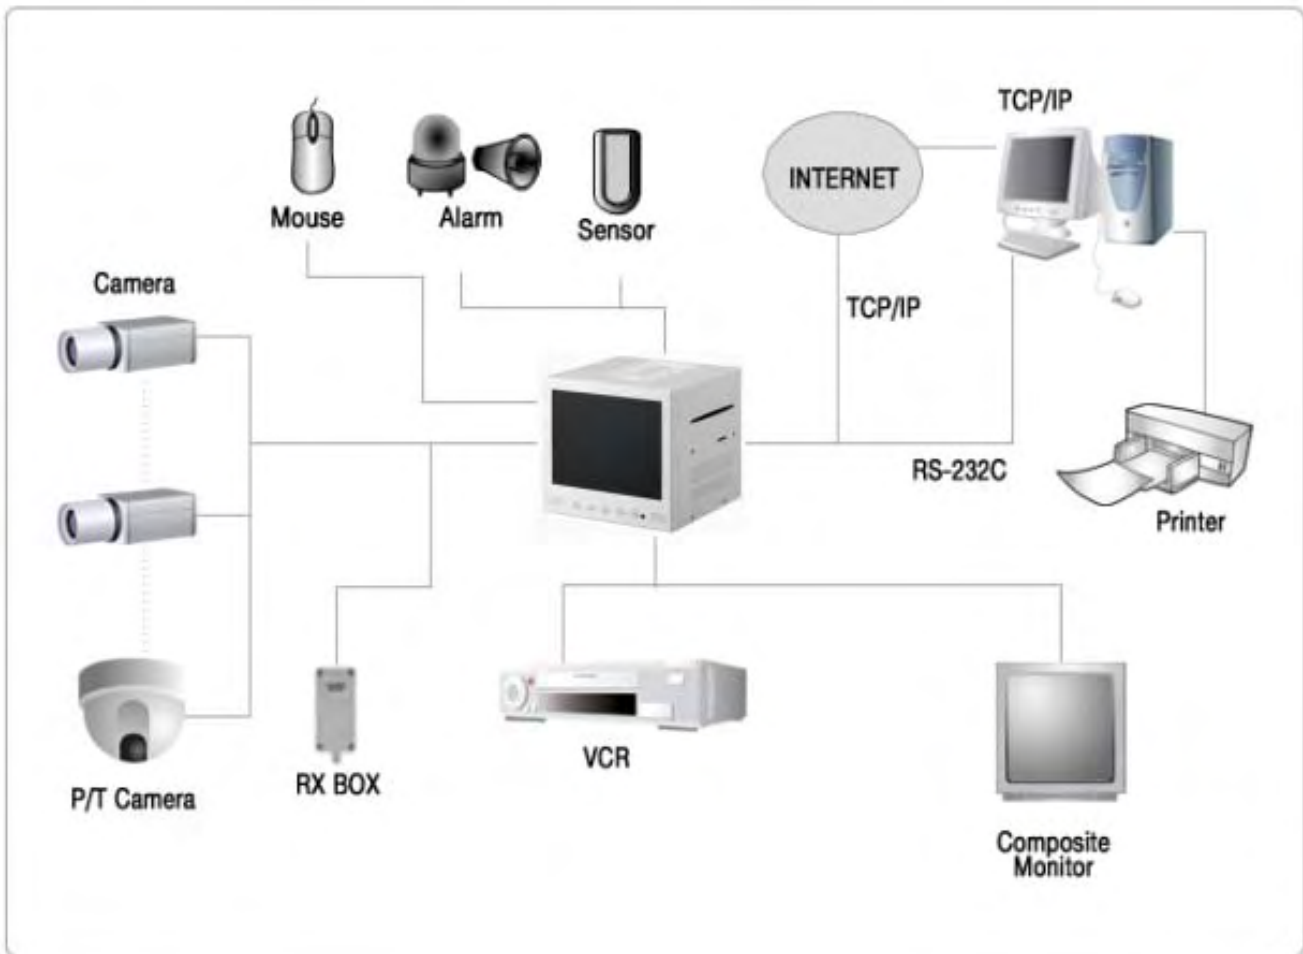

3-2. Camera Connection


Procedure:

- Connect the BNC video cable and the power cable to the camera.
- Connect the the DVR with the other end of the BNC video cable, the DVR power supply, and the mouse.
- Turn on DVR power and adjust camera lens viewing angle.

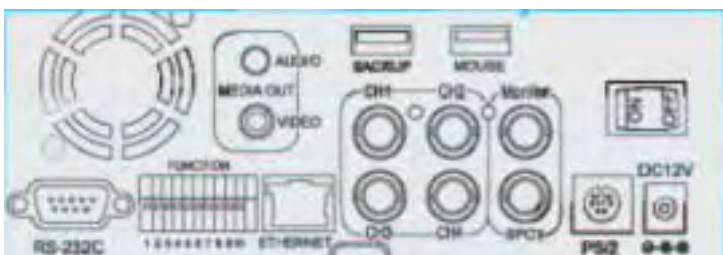


Media out (Audio/Video) is for LR-804J02 only

4-1. Live Playing/ Recording Mode

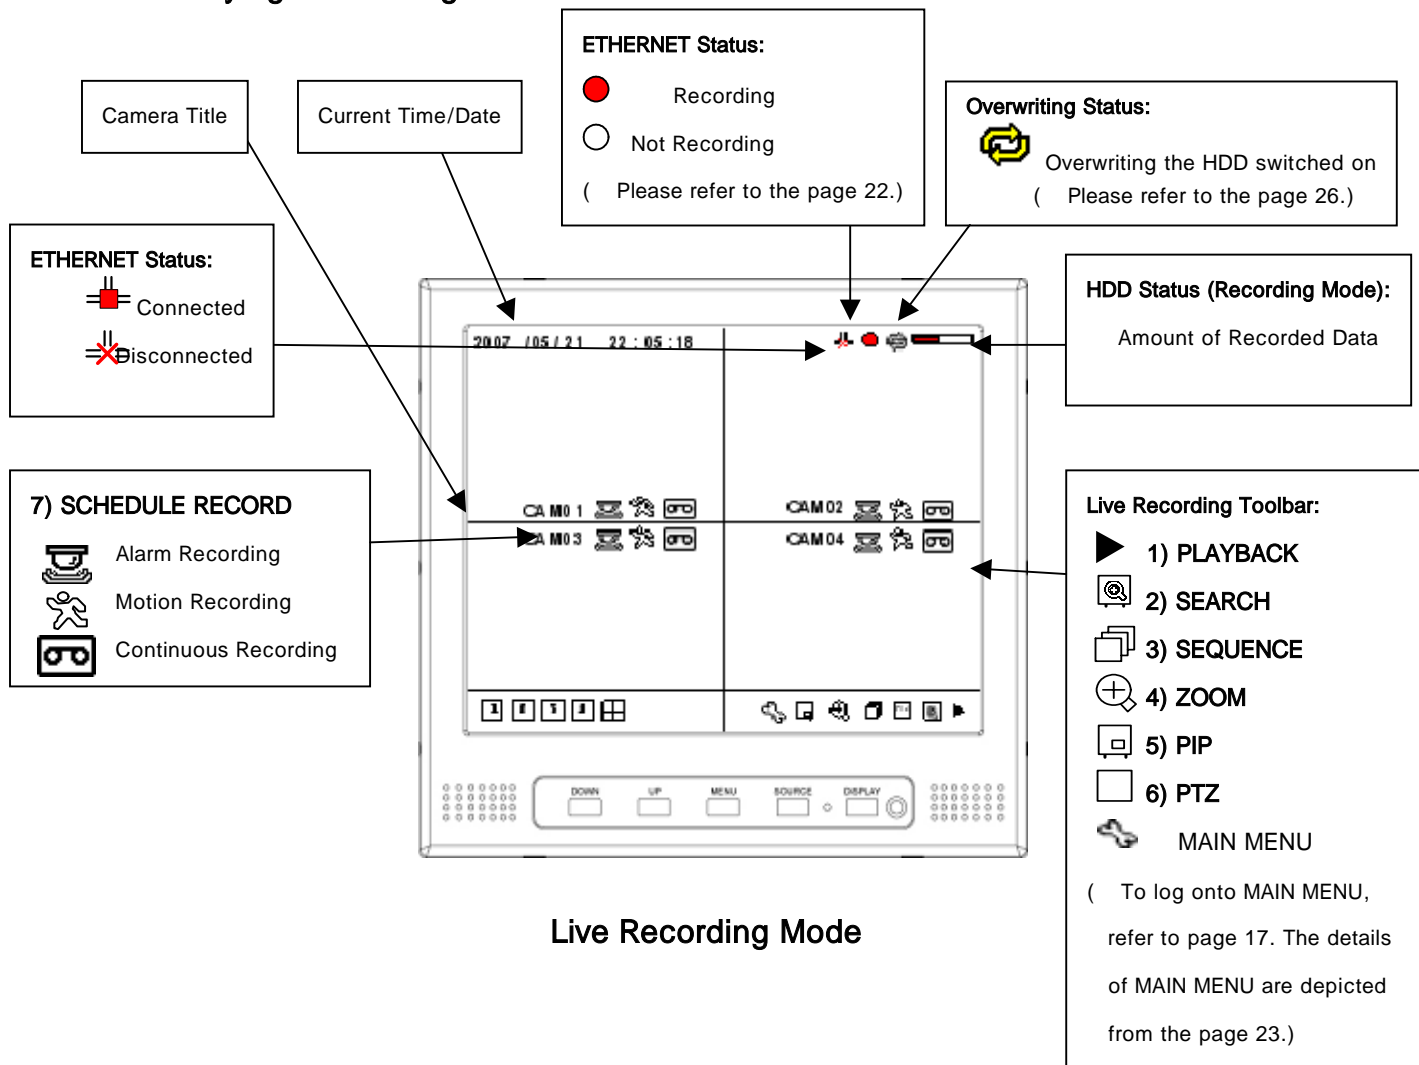

4-2. Live Playing/ Recording Mode PLAYBACK

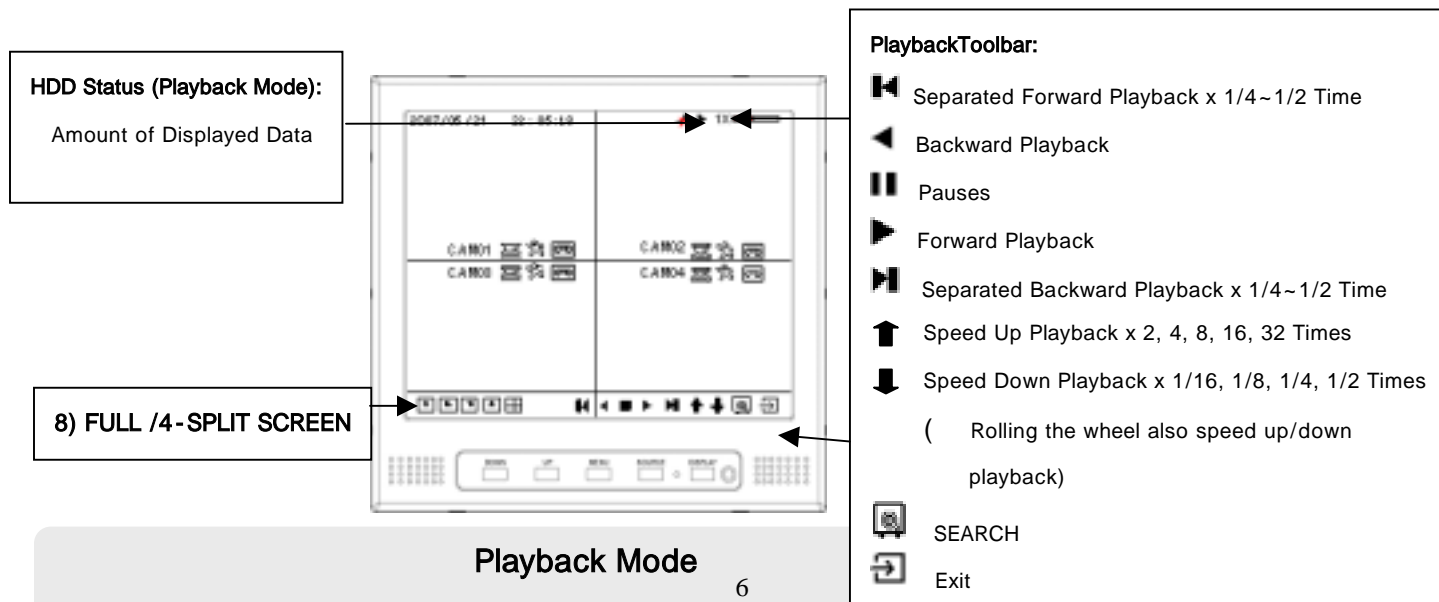

 
 
 

 


 




 
 





 
Click to enter the playback mode shown as below.



Media Player (This chapter is for LR-804J02 only)

5-1. Remote Controller

Function Overview of Buttons

| BUTTON | DESCRIPITON | |
|---|--------------|---|
|  | Power | Power on/off the Media Player. |
|  | Setup | Display the setup menu. |
|  | Menu | Display the root menu of the disc. |
|  | Eject | Eject/Draw in the disc. |
|  | Audio | Select the audio language. |
|  | Subtitle | Select the subtitle language or turn it on/off. |
|  | Repeat | Select the repeat type for media playing. |
|  | Display | Display information about the disc. |
|  | Slow | Play at 1/2, 1/3, 1/4, 1/5, 1/6 or 1/7 time normal speed. |
|  | 0-9, 10+ | Input numbers. |
|  | Rewind | Scan backward at 2, 4, 8 or 16 times normal speed. |
|  | Fast Forward | Scan forward at 2, 4, 8, or 16 times normal speed. |
|  | Play | Play media files |
|  | Pause | (Once) Go into the pause mode. (2 or more times) Go into the setup mode. |
|  | Previous | Go back to the preceding track or scene during playback. |
|  | Next | Go to the next chapter, track or scene during playback. |
|  | Stop | (Once) Pause at the present playing point. (2 or more times) Stop playing. |
|  | Up | Move up (for navigating the setup menu). |
|  | Down | Move down (for navigating the setup menu). |
|  | Left | Move left (for navigating the setup menu). |
|  | Right | Move right (for navigating the setup menu). |
|  | Enter | Execute the selected item or setting. |

